


## Z12 Firmware Upgrade Instructions

1. Download and run the z12\_fwupgrader\_1\_1\_009.exe

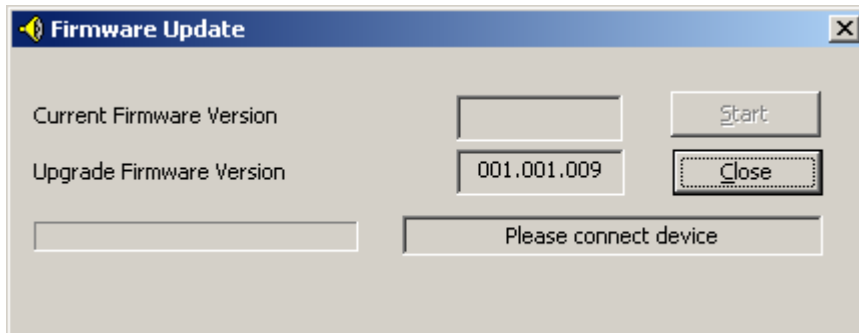

2. Plug in the larger end of the USB cable to the computer.



## Zetta Systems Limited


3. Please make sure Z12 is off. By using a needle or clip, PRESS and HOLD the upgrade button at the bottom of Z12. Then, plug in the smaller end of the USB cable to Z12.



UPGRADE BUTTON




4. The firmware upgrade process will start automatically.

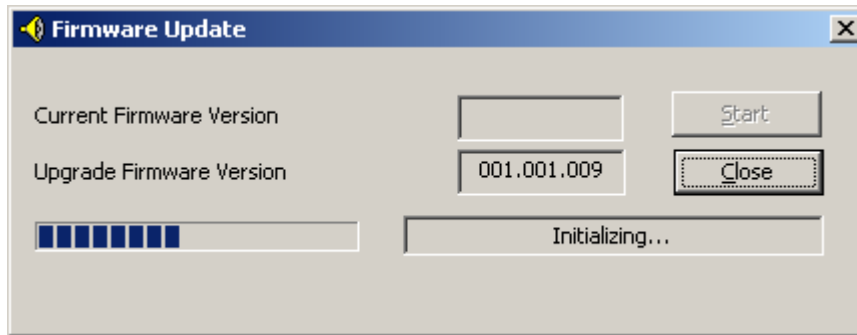

After few seconds, the LED indicator of Z12 will turn RED. Please DO NOT REMOVE USB connection while updating firmware.

5. After completing the firmware upgrade process, the firmware upgrader will be back to waiting screen as shown below.

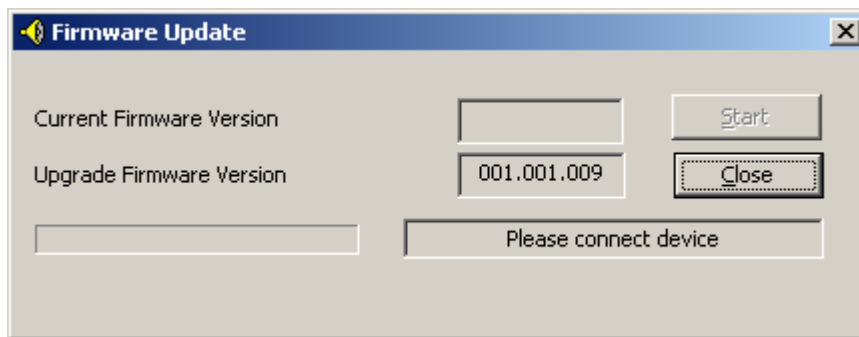

And the LED indicator of Z12 will be flashing GREEN. At this moment, Z12 can be safely removed from the computer.